

Vertical Indicator Post

IPV

Indicator Posts

IPV - Vertical Indicator Post

Physical Data

Reference	Dimensions (mm/inch)						Weight (kg)
	A	B	C	D	E	F	
IPV	1270	1006	759.5	292	190	305	98.7

IPV - Vertical Indicator Post


Trench Depth

Reference	Unit	Trench Depth according to Valve Size									
		DN100/4"		DN150/6"		DN200/8"		DN250/10"		DN300/12"	
		Min.	Max	Min.	Max	Min.	Max	Min.	Max	Min.	Max
IPV	mm	958	1808	1073	1923	1200	2050	1314	2164	1448	2298

IPV - Vertical Indicator Post

Specifications

- Indicator of "Open" and "Shut" positions
- Used to operate a buried or hidden post indicator valve
- 850 mm adjustment range
- Wrench handle fits over a "U" bracket on the barrel, this can be fixed with a padlock to secure the operating wrench to the barrel
- Internally and externally coated in red epoxy RAL3000
- 2.2 m long stem bar is supplied (for valves of 4" or more)

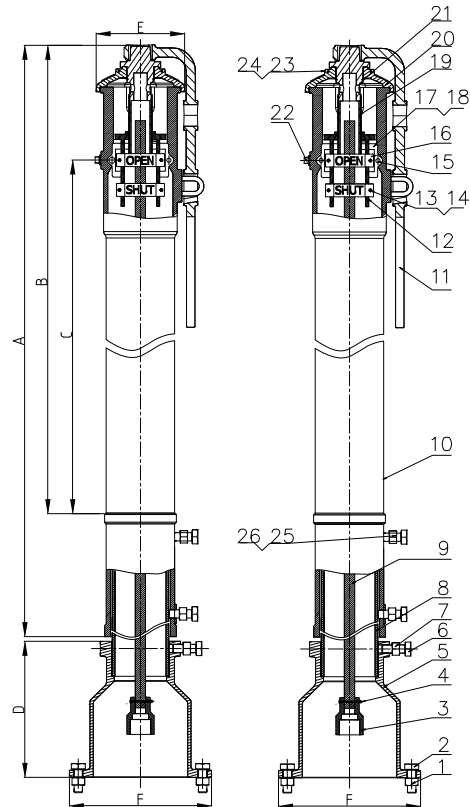


IPV

Materials List

Item	Part	Material	Specification	Part Number	Weight (kg.)
1	Hex Nut	Carbon Steel Zinc Plated		-	-
2	Hex Bolt	Carbon Steel Zinc Plated		-	-
3	Socket	Ductile Iron	A536, 65-45-12	IPV-SOCK	2.42
4	Cotter Pin	Stainless Steel	AISI 304	IPV-COTT	0.02
5	Base Flange	Cast Iron	ASTM A126 Class B	IPV-BF	14.52
6	Hex Bolt	Carbon Steel Zinc Plated		-	-
7	Hex Nut	Carbon Steel Zinc Plated		-	-
8	Standpipe	Carbon Steel	ASTM A53	-	-
9	Stem 1" Square	Carbon Steel	AISI 1045	IPV-STEM	12.18
10	Body	Cast Iron	ASTM A126 Class B	-	-
11	Locking Wrench	Ductile Iron	A536, 65-45-12	IPV-WREN	3.56
12	Target Carrier Nut	Stainless Steel	AISI 304	-	-
13	Hex Bolt	Carbon Steel Zinc Plated		-	-
14	Hex Nut	Carbon Steel Zinc Plated		-	-
15	Hex Bolt	Carbon Steel Zinc Plated		-	-
16	Target - Open	Cast Aluminum		IPV-OPEN	0.07
	Target - Shut		IPV-SHUT	0.07	
17	Window Class	Plexiglass		IPV-WIN	0.03
18	Window Gasket	PTFE		IPV-WG	0.01
19	Operating Nut	Stainless Steel	AISI 304	-	-
20	Top Section	Cast Iron	ASTM A126 Class B	-	-
21	Snap Ring		AISI 1066	-	-
22	Plug	Malleable Iron Galvanized		-	-
23	Square Nut	Carbon Steel Zinc Plated		-	-
24	Hex Bolt	Carbon Steel Zinc Plated		-	-
25	Hex Bolt	Carbon Steel Zinc Plated		-	-
26	Hex Nut	Carbon Steel Zinc Plated		-	-





Vertical Indicator Post

IPV

Installation

NOTE: Ensure that the post indicator valve is in the fully open position before installing the Vertical Indicator Post.

1.) Disassemble the Indicator Post

Take off the Locking Wrench (11), loosen the two Hex bolt (24) and Square Nut (23) and remove the Top Section (20), operating nut assembly and the Square Stem (9) as well as the socket (3). Slide off the Body (10) from the Standpipe (8) by loosening the two Hex Bolts (6) and Hex Nuts (7), slide off the Standpipe (8) from the Base Flange (5).

2.) Install the Base Flange and Lower Standpipe

Attach the Base Flange (5) together with the Standpipe (8) to the Post Flange of the post indicator valve using the four Hex nuts (1) and Hex bolts (2). Fix the Standpipe (8) to the Base Flange (5) using the Hex Bolt (6) and Hex Nut (7).

3.) Adjust the Ground Line Mark

Pull the Body (10) over the Standpipe (8) until the Ground Line Mark on the Body (10) is the same height as the ground level. Tighten the two Hex Nuts (6) and Hex Bolts (7).

4.) Adjust the Square Stem

Lower the Stem (9) into the Body (10) such that the socket (3) fits over the operating nut of the post indicator valve.

Ensure that Stem (9) engages the Operating Nut (19) a minimum of 2" but no more than 4.5". To check for correct engagement, the end of stem should be 2 to 4 inches below the top of the Body (10).

5.) Adjust the Targets

Remove the Target Carrier Assembly (12, 13 & 14) from inside the Body (10) by rotating the Operating Nut (19) counter-clockwise. The "Open" Target (16) and "Shut" Target (16) are adjusted up and down on the Target Carrier Assembly (12, 13 & 14) by pulling the middle section of the Target (Open & Shut) a small distance away from the Target Carrier Assembly (12, 13 & 14) and sliding the Target (Open & Shut) up or down as desired.

- If the post indicator valve is opened by turning the handwheel counter clockwise:

Move the two Open Targets (16) to the very top

of the Target Carrier Assembly. Locate the two "Shut" Targets according to the size of the post indicator valve size (stem) turning distance.

- If the post indicator valve is opened by turning the handwheel clockwise:

Move the two "Shut" Targets to the very top of the Target Carrier Assembly (12, 13 & 14). Locate the two "Open" Targets (16) according to the size of the post indicator valve (stem) turning distance.

6.) Final Assembly and Test

Insert the Target Carrier Assembly (12, 13 & 14) back into the Top Section (20) by rotating the Operating Nut (19) clockwise. Rotate the Operating Nut (19) until the "Open" Target (16) is centered in the window of the Body (10). Lower the Top Section (20) with the Target Carrier Assembly (12, 13 & 14) onto the Body (10), carefully ensuring that the Stem (9) engages with the Operating Nut (19) at least 50mm (2 in) but not more than 120mm (4.5 in). Secure the Top Section (20) to the Body (10) by tightening the hex bolt (24) and Square Nut (23). Close the post indicator valve and check to make sure that the "Shut" Target is properly centered in the window of the Body (10) and adjust as necessary.

Maintenance

Lubrication

Oil the bearing in the Top Section (20) at least once a year by adding several drops of oil in the hole located on the top of the Operating Nut (19).